


MINI Quick Fist® Rubber Clamp

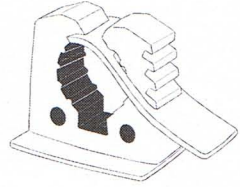

Safe Working load of each MINI QUICK FIST depends on fasteners used (loads double if you use 2 clamps):

Safe Working Load:

1 Clamp

Screw or bolt: 13lbs (6 kilos)
Industrial Adhesive: 7.5lbs (3.4 kilos)

2 Clamps

Screw or bolt: 26lbs (12 kilos)
Industrial Adhesive: 15lbs (6.8 kilos)

Installation Instructions:

1. Use either #6 flathead screw or bolt and a small washer (Do Not Over-tighten); or use enclosed E-6000® Industrial Adhesive. With the temperature between 50 to 90 degrees F (10 to 32 degrees C), apply a smooth, light coat of adhesive on both the clamp and on the mounting surface. Wait 10 minutes. Then mount the clamp by pressing it firmly against the mounting surface. Wait 24 hours before use.
2. The MINI QUICK FIST can be mounted with the strap facing in any direction.
3. To clamp: Put the tool or implement into the jaws and push the strap to its desired tightness.
4. The MINI QUICK FIST clamps are great as pipe stand-offs, but do not use on pipes whose temperature consistently exceeds 180 degrees F (or 82 degrees C).

Made in USA

End of the Road, Inc

1209 Beddington Pk.
Nashville, TN 37215, USA

www.endroad.com

ITEM #30032

U.S. AND world wide patents pending
UK patent 2403262